


# M-Finger Mounting Plate Assembly

---

## Back Mount Assembly

Drill out the holes in the steel plate with the #34 drill bit provided with kit. This will allow for the screws to pass through the steel plate and lamination and into the aluminum finger mounting plate

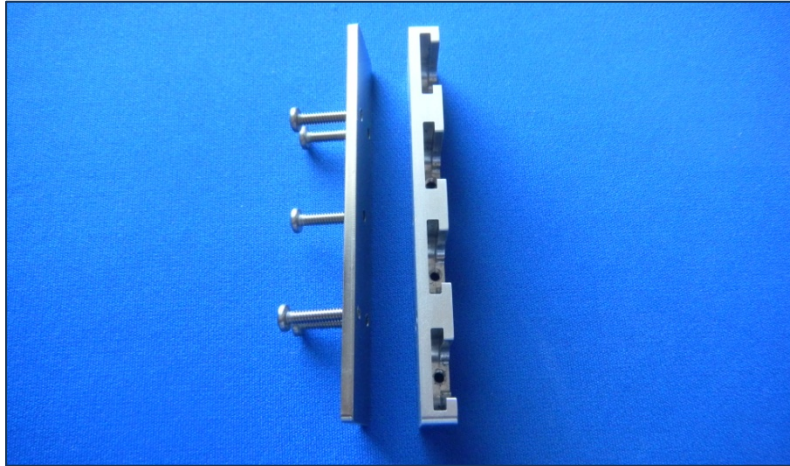

## Front Mount Assembly

Drill out the holes in the aluminum finger mounting plate with the #34 drill bit provided with kit. This will allow the mounting screws to pass through the mounting plate and lamination and into the steel plate.

